Oil-fired boiler range

Product Guide 2021









Working for you.



Dowload the **MyWorcester App**

For more information, visit worcester-bosch.co.uk/my



Contents

Flues	
Components	4 - 6
Terminal positioning	7 - 13
Domestic oil boilers	
Combi	14 - 17
System	18 - 23
Regular	24 - 31
Controls	
Bosch EasyControl	32 - 33
Greenstar Comfort	34 - 35
Other controls	36
Compatibility	37
Accessories	
Greenstar System Filter	38
Worcester CondenseSure	39
Greenstar Low Loss Header	39
Bosch commercial products	40 - 41
Worcester training	42 - 43

Floor standing internal boilers – flue components





COMPONENTS	PART NO.	DESCRIPTION
125MM DIAMET	ER	
	7 716 190 064	Standard telescopic flue kit (460 - 670mm)
	7 716 190 062	Short telescopic flue kit (360 - 460mm)
-	7 731 600 218	Vertical flue kit (1,080mm)
	7 716 190 033	1,000mm extension (960mm)
	7 716 190 097	600mm extension
	7 716 190 034	90° flue bend
	7 716 190 035	45° flue bend (pair)
	7 716 190 105	Infill plate kit (for high level horizontal flues)
0	7 716 190 101	Flue damper
Д	7 716 191 090	Flashing – flat roof
	7 716 191 091	Flashing – pitched roof
	7 716 190 050	Flue terminal guard
	7 716 190 092	Plume management kit

Greenstar Utility flue components – suitable for 32/50 and 50/70 models



COMPONENTS	PONENTS PART NO. DESCRIPTION		
150MM DIAMETER			
	7731 600 209	Standard horizontal flue kit (630mm)	
#	7731 600 210	Vertical BF kit (1,290mm)	
	7 716 190 045	Flue extension (960mm)	
	7 716 190 046	90° flue bend	
	7 716 190 047	45° flue bend (pair)	
	7 716 191 100	Flashing – pitched roof	
	7 716 190 051	Stainless steel flue terminal guard	

CONVENTIONAL FLUE			
月	7 716 190 104	Conventional flue 80/100mm and 80/103mm adaptor kit*†	
月	7 716 190 065	130mm adaptor**	
月	7 731 600 211	Conventional flue adaptor for 32/50 & 50/70 models	

^{*}Must be used on 12/18 & 18/25 models when using third party conventional flue

^{**}Only required when using third party conventional flue on the 25/32 model and must be used with a conventional flue 80/100mm and 80/103mm adaptor kit (7716 190 104)

[†]This conventional flue adapter used for 12kW to 32kW range

Plume management

Condensfit II™ plume management system

Part numbers 80mm dia. plume management kit

Comprises:

1 x terminal bend

1 x extension 500mm

1 x outlet assembly

1 x clamp pack

7 716 190 092

Accessories



COMPONENTS	PART NO.	DESCRIPTION
80MM DIAMETER		
	7 716 190 092	Plume management kit
	7 716 190 093	1,000mm extension
	7 716 190 095	90° bend
	7 716 190 094	45° bend (pair)
	8 718 687 007	Plume clamp

For every 90° plume management kit bend deduct 1,000mm and 500mm for every 45° plume management kit bend.

Flue terminal positioning

- Where a flue is terminated less than 600mm away from a projection above it and the projection consists of plastics or has a combustible or painted surface, then a heat shield of at least 750mm wide should be fitted.
- 2. If the lowest part of the terminal is less than 2m above the ground, balcony, flat roof or other place to which any person has access, the terminal should be protected by a guard.
- 3. Notwithstanding the dimensions given above, a terminal should not be sited closer than 300mm to combustible material. In the case of a thatched roof, double this separation distance should be provided. It is also advisable to treat the thatch with a fire retardant material and close wire in the vicinity of the flue.
- 4. It is essential that a flue or chimney does not pass through the roof within the shaded area delineated by dimensions Q and R.
- 5. Where protection is provided for plastic components, such as guttering, it is essential that this is to the standard specified by the manufacturer of the plastic components.

Floor standing external boilers – flue components






COMPONENTS	PART NO.	DESCRIPTION
125MM DIAMET	ER	
	7 716 190 034	Internal 90° flue bend (used inside boiler when fluing to side)
#	7 716 190 050	Flue terminal guard


Key to illustration

- 1. 1,500mm vertically between terminals on the same wall.
- 1,000mm below eaves, gutters, pipes and drains.
 External telescopic flue joints must be sealed with suitable silicon sealant.
- 3. 1,500mm measured horizontally between a vertical flue terminal and a window, dormer window or opening.
- 4. 1,200mm between terminals facing each other.
- Vertical flue clearance, 600mm adjacent to a boundary line unless it will cause a nuisance. BS 5410: Part 1 2014 recommends that care is taken when siting terminal in relation to boundary lines.
- 6. 2,500mm to a boundary line, unless it will cause a nuisance. It is recommended that care is taken when siting terminal in relation to boundary lines.
- 7. 300mm minimum clearance from a non opening skylight to a vertical flue.
- 8. Vertical flue clearance, 750mm to non-combustible building material, and 1,500mm clearance to combustible building material.
- 9. 1,000mm above, below and either side of an opening door, air vent or opening window. These clearances are required by BS 5410 Part 1:2014 to reduce a possible pluming nuisance, this could be reduced to 600mm if there was no pluming nuisance, seek guidance from the local authority building control.
- 600mm diagonally to an opening door, air vent or opening window.
- 11. 300mm to an internal or external corner.
- 12. 1,000mm below a Velux window for a vertical flue, 300mm above or either side of the Velux window. The terminal must be at least 1,000mm from the Velux when measured horizontally.

Flue terminal positioning

All measurements in millimetres

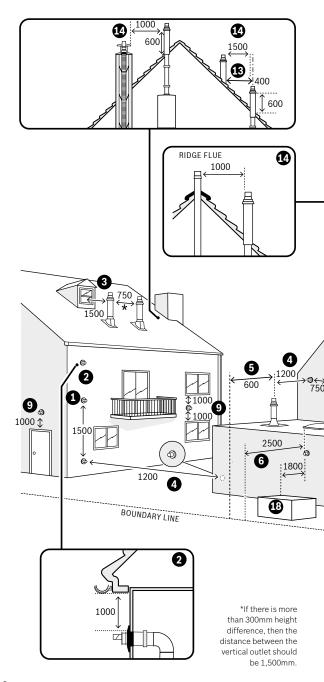

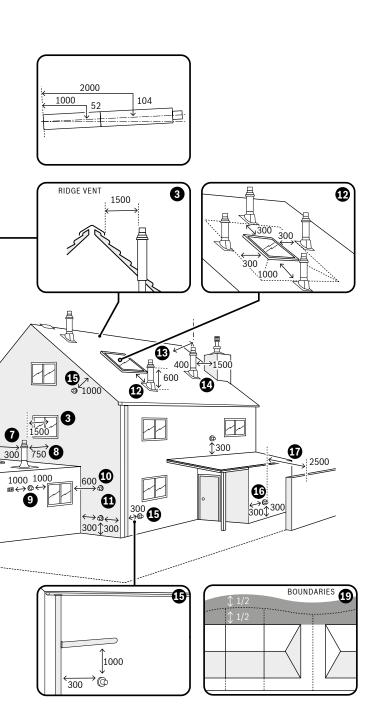

- 13. The flue must extend at least 600mm above the roof and 400mm horizontally from a pitched roof or 500mm in regions with heavy snow fall.
- 14. 1,500mm clearance to any vertical structure on a roof or room sealed flue that has a height difference of more than 300mm.
- 15. 1,000mm below eaves and gutters and sanitary pipe and 300mm from vertical sanitary pipes and drains.
- 16. Flue clearance must be at least 300mm from the ground. Terminal guards must be fitted if the flue is less than 2 metres from the ground or if a person could come into contact with the flue terminal.
- 17. 2,500mm to a surface facing a terminal, but must not be installed where it will cause a nuisance.
- 18. Terminals must be at least 1,800mm from an oil storage tank unless a wall with of at least 30 minutes fire resistance and extending 300mm wider and higher than the tank is between the tank and the terminal.
- 19. For the purpose of determining suitable flue terminal positions for the appliances, the boundary can be considered to extend to the centre line of any adjacent routes or waterways e.g. paths, streets, rights of way, canals, rivers or railways.

Plume management

Plume management kits are available for 125mm horizontally terminated flues. Please refer to the installation instructions supplied with the plume management kits.

For more information on Worcester's plume management options, including reduced flue terminal clearances, please read the flue manual.

Floor standing condensing combi boilers

Greenstar Heatslave II series





DIMENSIONS		
Width	520mm	
Height	855mm	
Depth	600mm	
CLEARANCES		
Above	300mm^	
Left	5mm	
Right	5mm	

[^]Note: Although clearance above the Heatslave range is stated to be 300mm, a removable worktop may be placed directly above the boiler, allowing 10mm clearance.

BOILER OUTPUT (kW)	FLOW RATE (L/MIN)*	PART NO.	
GREENSTAR HEATSLAVE II 12/18			
12 to 18	15†	7 731 600 165	
GREENSTAR HEATSLAVE II 18/25			
18 to 25	18 [†]	7 731 600 166	
GREENSTAR HEATSLAVE II 25/32			
25 to 32	22†	7 731 600 167	

^{*}Maximum flow rate to produce a 40°C temperature rise over a 90l draw off.



MAXIMUM FLUE LENGTHS (MM)				
DIAMETER	DIRECTION	12/18	18/25	25/32
	High level horizontal	6,000	6,000	6,000
125mm	Rear exit horizontal	6,000	6,000	6,000
	Side exit horizontal	5,000	5,000	5,000
	Vertical	8,000	8,000	8,000
80mm	Plume management	5,000	5,000	4,000

Note: For every 90° flue bend deduct 1,000mm and 500mm for every 45° flue bend. For every 90° plume kit bend deduct 1,000mm and 500mm for every 45° plume kit bend.

Flue damper (7 716 190 101) required on all lengths for all models except the 25/32kW model when uprated to 32kW. Flue damper only required for 32kW output when flue length is equal to or less than 4 metres.



For details of flue components see page 4.

Model weights and efficiencies

WEIGHT - LIFT GREENSTAR F	ERP SPACE HEATING EFFICIENCY CLASS	ERP WATER HEATING EFFICIENCY CLASS*	SAP EFFICIENCY	WATER HEATING ENERGY EFFICIENCY
124kg	A / 90%	В	89.0%	64.0%
GREENSTAR HEATSLAVE II 18/25				
126kg	A / 90%	В	88.9%	61.0%
GREENSTAR HEATSLAVE II 25/32				
128kg	A / 90%	В	88.8%	62.0%



For details of compatible controls see page 35. See page 36 for relevant accessories.



Floor standing condensing external combi boilers

Greenstar Heatslave II External series





DIMENSIONS	
Width	640mm
Height	950mm
Depth	770mm
CLEARANCES	
Above	600mm
RH/LH flue outlet on opposite side	10mm
RH flue outlet on rear	85mm
LH flue outlet on rear	10mm
Rear = flue outlet on side	150mm
Rear = rear flue outlet	2,500mm
Front	600mm

It is strongly recommended that the flue terminal faces away from walls to reduce the possibility of wetting occurring.

modele and carpaid			
BOILER OUTPUT (kW)	FLOW RATE (L/MIN)*	PART NO.	
GREENSTAR HEATSLAVE II EXTERNAL 12/18			
12 to 18	15†	7 731 600 168	
GREENSTAR HEATSLAVE II EXTERNAL 18/25			
18 to 25	18 [†]	7 731 600 169	
GREENSTAR HEATSLAVE II EXTERNAL 25/32			
25 to 32	22†	7 731 600 170	

^{*}Maximum flow rate to produce a 40°C temperature rise over a 90l draw off.



[†]Restricted DHW flow rate.

MAXIMUM FLUE LENGTHS (MM)				
DIAMETER	EXTERNAL KIT	12/18	18/25	25/32
80mm	Plume management	5,000	5,000	5,000

Note: For every 90° flue bend deduct 1,000mm and 500mm for every 45° flue bend. For every 90° plume kit bend deduct 1,000mm and 500mm for every 45° plume kit bend.

Flue damper (7 716 190 101) required on all lengths for all models except the 25/32kW model when uprated to 32kW. Flue damper only required for 32kW output when flue length is equal to or less than 4 metres.

Boiler comes with standard horizontal flue kit. A 90° bend is required when fluing to the side.



For details of flue components see page 5.

Model weights and efficiencies

WEIGHT – LIFT	ERP SPACE HEATING EFFICIENCY CLASS	ERP WATER HEATING EFFICIENCY CLASS [†]	SAP EFFICIENCY	WATER HEATING ENERGY EFFICIENCY
GREENSTAR H	IEATSLAVE II E	CTERNAL 12/18		
151kg	A / 90%	В	89.0%	64.0%
GREENSTAR H	IEATSLAVE II E	CTERNAL 18/25		
154kg	A / 90%	В	88.9%	61.0%
GREENSTAR HEATSLAVE II EXTERNAL 25/32				
158kg	A / 90%	В	88.8%	62.0%



For details of compatible controls see page 35. See page 36 for relevant accessories.



Floor standing condensing system boilers

Greenstar Danesmoor System series





600mm

The appliance is suitable for an under-worktop installation providing that the worktop above the boiler (min. 10mm clearance) is removable for maintenance and repair.

Front

BOILER OUTPUT (kW)	PART NO.	
GREENSTAR DANESMOOR SYSTEM 12/18		
12 to 18	7 731 600 160	
GREENSTAR DANESMOOR SYSTEM 18/25		
18 to 25	7 731 600 162	
GREENSTAR DANESMOOR SYSTEM 25/32		
25 to 32	7 731 600 164	



MAXIMUM FLUE LENGTHS (MM)				
DIAMETER	DIRECTION	12/18	18/25	25/32
	High level horizontal	6,000	6,000	6,000
125	Rear exit horizontal	6,000	6,000	6,000
125mm	Side exit horizontal	5,000	5,000	5,000
	Vertical	8,000	8,000	8,000
80mm	Plume management	5,000	5,000	4,000

Note: For every 90° flue bend deduct 1,000mm and 500mm for every 45° flue bend. For every 90° plume kit bend deduct 1,000mm and 500mm for every 45° plume kit bend.

Flue damper (7 716 190 101) required on all lengths for all models except the 25/32kW model when uprated to 32kW. Flue damper only required for 32kW output when flue length is equal to or less than 4 metres.



For details of flue components see page 4.

Model weights and efficiencies

WEIGHT - LIFT	ERP SPACE HEATING EFFICIENCY CLASS	SAP EFFICIENCY 2009			
GREENSTAR DANESMOOR SYSTEM 12/18					
111kg	A / 90.0%	90.7%			
GREENSTAR DANESMOO	GREENSTAR DANESMOOR SYSTEM 18/25				
112kg	A / 90.0%	90.6%			
GREENSTAR DANESMOOR SYSTEM 25/32					
121kg	A / 91.0%	90.5%			



For details of compatible controls see page 35. See page 36 for relevant accessories.



Floor standing condensing utility system boilers

Greenstar Danesmoor System Utility series





The appliance is suitable for an under-worktop installation providing that the worktop above the boiler (min. 10mm clearance) is removable for maintenance and repair.

BOILER OUTPUT (kW)	PART NO.	
GREENSTAR DANESMOOR SYSTEM UTILITY 12/18		
12 to 18	7 731 600 148	
GREENSTAR DANESMOOR SYSTEM UTILITY 18/25		
18 to 25	7 731 600 152	
GREENSTAR DANESMOOR SYSTEM UTILITY 25/32		
25 to 32	7 731 600 156	

MAXIMUM FLUE LENGTHS (MM)				
DIAMETER	DIRECTION	12/18	18/25	25/32
	High level horizontal	6,000	6,000	6,000
405	Rear exit horizontal	6,000	6,000	6,000
125mm	Side exit horizontal	5,000	5,000	5,000
	Vertical	8,000	8,000	8,000
80mm	Plume management	5,000	5,000	4,000

Note: For every 90° flue bend deduct 1,000mm and 500mm for every 45° flue bend. For every 90° plume kit bend deduct 1,000mm and 500mm for every 45° plume kit bend.

Flue damper (7 716 190 101) required on all lengths for all models except the 25/32kW model when uprated to 32kW. Flue damper only required for 32kW output when flue length is equal to or less than 4 metres.



For details of flue components see page 4.

Model weights and efficiencies

WEIGHT - LIFT	ERP SPACE HEATING EFFICIENCY CLASS	SAP EFFICIENCY		
GREENSTAR DANESMOOR SYSTEM UTILITY 12/18				
111kg	A / 90.0%	90.7%		
GREENSTAR DANESMOOR SYSTEM UTILITY 18/25				
112kg	A / 90.0%	90.6%		
GREENSTAR DANESMOOR SYSTEM UTILITY 25/32				
121kg	A / 91.0%	90.5%		



See page 36 for relevant accessories.



Floor standing condensing external system boilers

Greenstar Danesmoor System External series





DIMEN	DIMENSIONS			
Width	565mm			
Height		950mm		
Depth		780mm		
CLEAR (FLUE		ON FROM FR	ONT)	
	Right	Left	Rear	
Left	10mm	2,500mm^	85mm	
Right	2,500mm	10mm	45mm	
Rear	50mm**	50mm**	2,500mm**	
Above	600mm	600mm	600mm	
Front	600mm	600mm	600mm	

[^]From end of flue terminal allow 2,500mm clearance.

BOILER OUTPUT (kW)	PART NO.	
GREENSTAR DANESMOOR SYSTEM EXTERNAL 12/18		
12 to 18	7 731 600 150	
GREENSTAR DANESMOOR SYSTEM EXTERNAL 18/25		
18 to 25	7 731 600 154	
GREENSTAR DANESMOOR SYSTEM EXTERNAL 25/32		
25 to 32	7 731 600 158	

^{**200}mm if using a high level terminal exiting through the rear panel.

MAXIMUM FLUE LENGTHS (MM)				
DIAMETER	EXTERNAL KIT	12/18	18/25	25/32
80mm	Plume management	5,000	5,000	5,000

Note: For every 90° flue bend deduct 1,000mm and 500mm for every 45° flue bend. For every 90° plume kit bend deduct 1,000mm and 500mm for every 45° plume kit bend.

Flue damper (7 716 190 101) required on all lengths for all models except the 25/32kW model when uprated to 32kW. Flue damper only required for 32kW output when flue length is equal to or less than 4 metres.



For details of flue components see page 5.

Model weights and efficiencies

3			
WEIGHT - LIFT	ERP SPACE HEATING EFFICIENCY CLASS	SAP EFFICIENCY	
GREENSTAR DANESMOOR SYSTEM EXTERNAL 12/18			
119kg	A / 90.0%	90.7%	
GREENSTAR DANESMOOR SYSTEM EXTERNAL 18/25			
121kg	A / 90.0%	90.6%	
GREENSTAR DANESMOOR SYSTEM EXTERNAL 25/32			
131kg	A / 91.1%	90.5%	



See page 36 for relevant accessories.



Floor standing condensing regular boilers

Greenstar Danesmoor regular series





DIMENSIONS	
Width	370mm
Height	855mm
Depth	600mm
CLEARANCES	
Above (annual service)	10mm
Above (maintenance & repair)	300mm
Left	5mm
Right	5mm
Front	600mm

The appliance is suitable for an under-worktop installation providing that the worktop above the boiler (min. 10mm clearance) is removable for maintenance and repair.

BOILER OUTPUT (kW)	PART NO.	
GREENSTAR DANESMOOR 12/18		
12 to 18	7 731 600 159	
GREENSTAR DANESMOOR 18/25		
18 to 25	7 731 600 161	
GREENSTAR DANESMOOR 25/32		
25 to 32	7 731 600 163	



	MAXIMUM FLUE LENGTHS (MM)			
DIAMETER	DIRECTION	12/18	18/25	25/32
	High level horizontal	6,000	6,000	6,000
105	Rear exit horizontal	6,000	6,000	6,000
125mm	Side exit horizontal	5,000	5,000	5,000
	Vertical	8,000	8,000	8,000
80mm	Plume management	5,000	5,000	4,000

Note: For every 90° flue bend deduct 1,000mm and 500mm for every 45° flue bend. For every 90° plume kit bend deduct 1,000mm and 500mm for every 45° plume kit bend. Flue damper (7 716 190 101) required on all lengths for all models except the 32kW model.

Flue damper (7 716 190 101) required on all lengths for all models except the 25/32kW model when uprated to 32kW. Flue damper only required for 32kW output when flue length is equal to or less than 4 metres.



For details of flue components see page 4.

Model weights and efficiencies

WEIGHT - LIFT	ERP SPACE HEATING EFFICIENCY CLASS	SAP EFFICIENCY
GREENSTAR DANESMOOR 12/18		
104kg	A / 90.0%	90.7%
GREENSTAR DANESMOOR 18/25		
108kg	A / 90.0%	90.6%
GREENSTAR DANESMOOR 25/32		
114kg	A / 91.0%	90.5%



For details of compatible controls see page 35. See page 36 for relevant accessories.



Floor standing condensing regular utility boilers

Greenstar Danesmoor Utility regular series





The appliance is suitable for an under-worktop installation providing that the worktop above the boiler (min. 10mm clearance) is removable for maintenance and repair.

BOILER OUTPUT (kW)	PART NO.
GREENSTAR DANESMOOR UTILITY 12/18	
12 to 18	7 731 600 147
GREENSTAR DANESMOOR UTILITY 18/25	
18 to 25	7 731 600 151
GREENSTAR DANESMOOR UTILITY 25/32	
25 to 32	7 731 600 155



MAXIMUM FLUE LENGTHS (MM)				
DIAMETER	DIRECTION	12/18	18/25	25/32
	High level horizontal	6,000	6,000	6,000
105	Rear exit horizontal	6,000	6,000	6,000
125mm	Side exit horizontal	5,000	5,000	5,000
	Vertical	8,000	8,000	8,000
80mm	Plume management	5,000	5,000	4,000

Note: For every 90° flue bend deduct 1,000mm and 500mm for every 45° flue bend. For every 90° plume kit bend deduct 1,000mm and 500mm for every 45° plume kit bend.

Flue damper (7 716 190 101) required on all lengths for all models except the 25/32kW model when uprated to 32kW. Flue damper only required for 32kW output when flue length is equal to or less than 4 metres.



For details of flue components see page 4.

Model weights and efficiencies

WEIGHT - LIFT	ERP SPACE HEATING EFFICIENCY CLASS	SAP EFFICIENCY
GREENSTAR DANESMOOR UTILITY 12/18		
104kg	A / 90.0%	90.7%
GREENSTAR DANESMOOR UTILITY 18/25		
108kg	A / 90.0%	90.6%
GREENSTAR DANESMOOR UTILITY 25/32		
108kg	A / 91.0%	90.5%



See page 36 for relevant accessories.



Floor standing condensing external regular boilers

Greenstar Danesmoor External regular series





DIMEN	SIONS				
Width		565mm			
Height		950mm			
Depth		780mm			
	CLEARANCES FLUE ORIENTATION FROM FRONT)				
	Right	Left	Rear		
Left	10mm	2,500mm^	85mm		
Right	2,500mm	10mm	45mm		
Rear	50mm**	50mm**	2,500mm^		
Above	600mm	600mm	600mm		
Front	600mm	600mm	600mm		

[^]From end of flue terminal allow 2,500mm clearance.

BOILER OUTPUT (kW)	PART NO.
GREENSTAR DANESMOOR EXTERNAL 12/18	
12 to 18	7 731 600 149
GREENSTAR DANESMOOR EXTERNAL 18/25	
18 to 25	7 731 600 153
GREENSTAR DANESMOOR EXTERNAL 25/32	
25 to 32	7 731 600 157

^{**200}mm if using a high level terminal exiting through the rear panel.

MAXIMUM FLUE LENGTHS (MM)				
DIAMETER	EXTERNAL KIT	12/18	18/25	25/32
80mm	Plume management	5,000	5,000	5,000

Note: For every 90° flue bend deduct 1,000mm and 500mm for every 45° flue bend. For every 90° plume kit bend deduct 1,000mm and 500mm for every 45° plume kit bend.

Flue damper (7 716 190 101) required on all lengths for all models except the 25/32kW model when uprated to 32kW. Flue damper only required for 32kW output when flue length is equal to or less than 4 metres.



For details of flue components see page 5.

Model weights and efficiencies

•		
WEIGHT - LIFT	ERP SPACE HEATING EFFICIENCY CLASS	SAP EFFICIENCY
GREENSTAR DANESMOOR EXTERNAL 12/18		
99kg	A / 90.0%	90.7%
GREENSTAR DANESMOOR EXTERNAL 18/25		
102kg	A / 90.0%	90.6%
GREENSTAR DANESMOOR EXTERNAL 25/32		
106kg	A / 91.0%	90.5%



See page 36 for relevant accessories.



Floor standing condensing regular utility boilers

Greenstar Utility regular series





[^]Note: Although clearance above the Greenstar Utility range is stated to be 300mm, a removable worktop may be placed directly above the boiler, allowing 10mm clearance.

BOILER OUTPUT (kW)	PART NO.
GREENSTAR UTILITY 32/50	
32 to 50	7 731 600 171
GREENSTAR UTILITY 50/70	
50 to 70	7 731 600 172



· ine iongine				
MAXIMUM FLUE LENGTHS (MM)				
DIAMETER	DIRECTION	32/50	50/70	
150mm	High level horizontal	6,400	6,400	
	Rear exit horizontal	6,400	6,400	
	Side exit horizontal	4,400	5,400	
	Vertical	10,000	10,000	

Note: For every 90° flue bend deduct 1,000mm and 500mm for every 45° flue bend.

Flue damper (7 716 190 101) required on all lengths for all models except the 25/32kW model when uprated to 32kW. Flue damper only required for 32kW output when flue length is equal to or less than 4 metres.



For details of flue components see page 5.

Model weights and efficiencies

WEIGHT - LIFT	ERP SPACE HEATING EFFICIENCY CLASS	SAP EFFICIENCY		
GREENSTAR UTILITY 32/50				
215kg	A / 90.0%	90.7%		
GREENSTAR UTILITY 50/70				
220kg	A / 91.0%	90.5%		



See page 38 for relevant accessories.



Controls

To find out which Greenstar boilers are compatible with our range of optional plug-in controls, see page 56-57.

Bosch EasyControl Smart internet-connected controller

Bosch EasyControl controller

Part no. 7 736 701 341 (white) Part no. 7 736 701 392 (black)



- Decide times and temperatures for heating and hot water, all from your smart device.
- ► Home presence detection.
- ► Easy to use and set up with simple displays and intuitive app.
- ▶ Visual graphs to monitor heating and hot water use.
- Requires just a 2-core wire connection between the control and the boiler.

Bosch EasyControl Adapter

Part no. 7 736 701 560

► The adapter allows the EasyControl to be compatible with other manufacturer's boilers through OpenTherm protocols or boilers with a 230V room thermostat connection. When connected via a 230V connection, only central heating can be controlled.



Collect loyalty points per installation

Individual Smart TRV

Part no. 8 750 000 270



- Decide heating times and temperatures for individual rooms with the Bosch EasyControl.
- If installing Smart TRVs with your EasyControl, one must be installed in the same zone as the EasyControl wall unit.
- ► For optimum performance we recommend Smart TRVs are installed on all radiators.
- ► Child-lock setting through EasyControl App.

Bosch EasyControl TRV set

Part no. 7 736 701 555 (1 white EasyControl, 3 Smart TRVs) Part no. 7 736 701 556 (1 black EasyControl, 3 Smart TRVs)





Up to a 5 year guarantee*. The guarantee of our EasyControl and Comfort range will match the Worcester Bosch boiler that it is installed with.

*When installed with a Greenstar oil boiler and Greenstar System Filter. Terms and conditions apply.

Greenstar Comfort controls

Greenstar Comfort plug-in twin channel programmer

Part no. 7 733 600 003



- ► Simple menu navigation.
- ► Heating programme visualisation bar.
- ▶ 7-day time control for heating and hot water.

Greenstar Comfort I RF wireless room thermostat and plug-in twin channel programmer

Part no. 7 733 600 001



All the features of Comfort PLUS...

- ► Enhanced load compensation for increased efficiency.
- ▶ Quick installation no wiring required.
- ► Extremely reliable RF signal.

Greenstar Comfort II RF wireless programmable room thermostat and plug-in RF receiver

Part no. 7 733 600 002



All the features of Comfort & Comfort I PLUS...

- ▶ 6 adjustable heating temperatures per day.
- ▶ Set programme at the room thermostat.
- ▶ Remote access to boiler diagnostic codes.
- ► Optional wall plate available 7 733 600 039. The wall plate can be used with all the comfort range of controls.

Comfort Wall Plate Kit

Part no. 7 733 600 039



 Allows remote mounting of a Comfort plug-in unit which is then wired to the boiler. Ideal for use with external boilers

The Greenstar Comfort I RF and Greenstar Comfort II RF can be used with external combi boilers if they are hard wired and used with the Comfort Wall Plate Kit.

Other controls

Digital plug-in 7 day twin channel programmer

Part no. 7 716 192 033



▶ Plugs into the boiler fascia panel and offers 3 separate time periods for both heating and hot water.

Intelligent weather and load compensation controls

Outdoor weather sensor (for use with internal and external models)

Part no. 7 716 192 764



► Monitors external temperatures to offer weather compensation in combination with the in-built heat curves of the Greenstar Heatslave II. For use with 230V controls. Not compatible with Worcester Comfort controls. To be used with a 230V programmer and room thermostat.

Controls compatibility

CONTROL	PART NO.			
ALL GREENSTAR OIL BOILERS				
Bosch EasyControl (white)**	7 736 701 341			
Bosch EasyControl (black)**	7 736 701 392			
GREENSTAR HEATSLAVE II				
Comfort	7 733 600 003			
Comfort I RF	7 733 600 001			
Comfort II RF	7 733 600 002			
Outdoor weather sensor*	7 716 192 764			
GREENSTAR HEATSLAVE II EXTERNAL				
Comfort† with wall plate kit	7 733 600 003			
Comfort I RF† with wall plate kit	7 733 600 001			
Comfort II RF† with wall plate kit	7 733 600 002			
Outdoor weather sensor*	7 716 192 764			
GREENSTAR DANESMOOR				
Digital plug-in 7 day twin channel programmer	7 716 192 033			

^{**}EasyControl Adapter required. The EasyControl only controls heating, a separate control will be required for hot water.

^{*}Not compatible with Comfort controls.

[†]Use with Comfort Wall Plate Kit 7 733 600 039.

Accessories



Greenstar System Filter Range

Part no. 7 733 600 266 (22mm mini)

7 733 600 236 (22mm)

7 733 600 237 (28mm)

7 733 600 476 (22mm brass)

Isolation valve indicators

Can be opened using a single 90° turn, with red and green indicators showing when the filter is in operation.

► Mini System Filter

Designed for installs with space restrictions as it is 54mm smaller in height than the normal 22mm filter.

▶ Brass System Filter

Precision engineered, robust filter, with a large capacity, that is both easy to install and clean. The brass filters have a bypass, making it easy to remove and clean while the boiler continues to operate.



Collect loyalty points

Worcester CondenseSure (Suitable for internal oil boilers only)

Part no. 7 716 192 746



- ► No electrical supply needed
- ► Compatible with all boilers
- ► Uses 'free' energy
- ► Installation flexibility

Greenstar Low Loss Header

Part no. 7 716 192 614



Suitable for Utility and Danesmoor internal boilers only, a ready-made solution for the connection of two Greenstar system or regular boilers on a sealed heating system with a combined output of up to 70kW.

Bosch Commercial and Industrial

Offering a broad portfolio that covers all heating and cooling requirements

Expand your business with Bosch Commercial and Industrial

The products and support services you can access gives you the chance to expand your business offering and provide installations for:

- ► Large domestic properties.
- ► Hotels, guest houses and holiday parks.
- Sports and leisure centres.
- Education and healthcare facilities.
- Mini district heating schemes.
- ► And many more.

Wall-hung commercial solutions



- Gas- or oil-fired boilers with individual outputs from 50kW to 800kW.
- Compact condensing multi-boiler cascade systems of wall-mounted boilers (400kW in just 1m²).
- Range of digital and smart controls, including our industry first internet-connected commercial heating control.
- ► Heat Interface Units with hot water flow rates of 15 I/min and 21 I/min.



Floor-Standing solutions



- ► Light-commercial, commercial and industrial boilers from 150kW to 38,000kW.
- Condens 7000 F floor-standing boiler, with outputs from 150kW to 600kW, requires no additional components such as a low loss header.

For more information please call **0330 123 3004** or visit **bosch-industrial.co.uk**

- (in) Bosch Commercial and Industrial UK
- (y) @BoschHeating_UK

Industry training courses

For more details on classroom, industry and online courses visit our website at worcester-bosch.co.uk/training or call **0330 123 0166**.

INDUSTRY FOCUSED COURSES

Basic Electrics for Heating Engineers

Chemical Water Treatment

QCF Gas Safety Awareness

WRAS Water Regulations

Unvented Hot Water Systems and Safety Training and Assessment

Adey's Best Practice Water Treatment

ACS QUALIFICATION COURSES

Commercial ACS Training and Assessment

Domestic ACS Reassessment

LPG Changeover Training and Assessment



Product training courses

GAS BOILER COURSES

Specification Levels 1-2

Installation and Commissioning

Service and Maintenance

Fault Finding and Repair Levels 1-3

Legacy Service and Repair

8000 Lifestyle

Greenstar 2000

OIL BOILER COURSES

Advanced Oil Fault Finding Training Course

Greenstar Oil Training Course

OFTEC 10-101, 10-105E & 10-600A

OFTEC 101, 105E & 600A

OFTEC 50

RENEWABLE COURSES

Greenskies Solar Hot Water System Training Course

Greensource Air to Air Heat Pump Training Course

Greenstore LECP Ground Source Heat Pump Training Course

COMMERCIAL COURSES

GB162 Training Course

Heat Interface Unit (HIU) Training Course



Search and join our 'Worcester Bosch Training Academy' Facebook group for online courses and helpful training videos.

Useful contacts

Service Enquiries

Tel: 0330 123 9559 Email: service.mailbox@uk.bosch.com

Sales

Tel: 0330 123 9669

Spare Parts

Tel: 0330 123 9779

Technical Helpline (Pre & Post Sales)

Tel: 0330 123 3366 Email: technical-advice@uk.bosch.com

Controls Helpline

Tel: 0330 123 3641

Training

Tel: 0330 123 0166

Literature

Email: brochure-request@uk.bosch.com or download instantly from our website or telephone 0330 123 9119.

Follow us!



(y) @WorcesterBosch



f) Worcester Bosch Professional



(a) @WorcesterBoschProfessional



in) Worcester Bosch



Worcester, Bosch Group

Worcester Bosch, Cotswold Way, Warndon, Worcester, WR4 9SW

worcester-bosch.co.uk

Calls to and from Bosch Thermotechnology Ltd may be recorded for training and quality assurance purposes.

Worcester Bosch is a brand name of Bosch Thermotechnology Ltd.

This brochure is accurate at the date of printing, but may be superseded and should be disregarded if specification and/or appearances are changed in the interest of continued improvement. The statutory rights of the consumer are not affected.

